


Boss RT1 Roof Top Tent to Canopy & or Roof Bar Installation

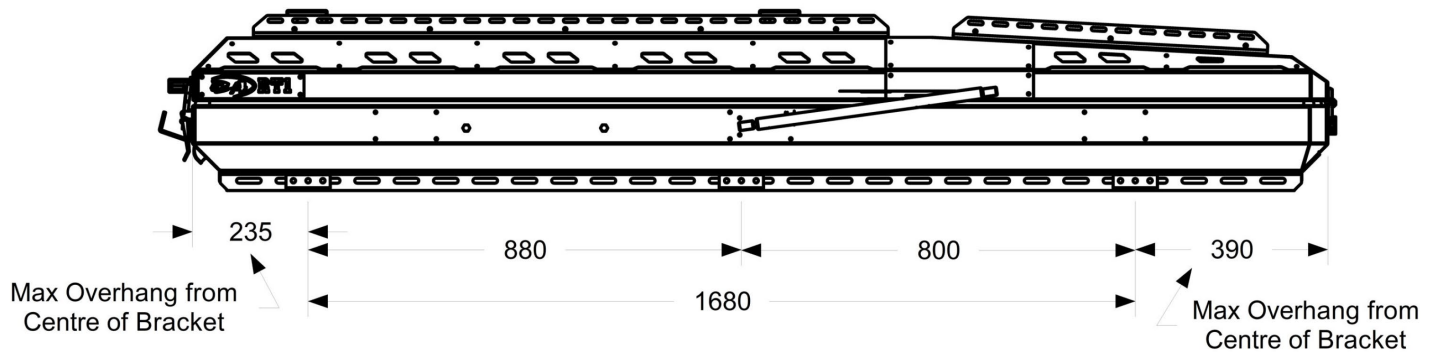

Important!

1. Any deviations from the following fitting instructions must be approved by Boss Aluminium before proceeding.
2. All fasteners provided are of a specific grade and specification to suit the application and must not be substituted. Replacements for any lost or damaged fasteners must be supplied or approved by Boss Aluminium before use.
3. Nyloc nuts must be replaced if installed and then removed.
4. Mounting rails must sit completely flat on the mounting surface.
5. A minimum of 6 × M8 mounting bolts per side must be used (12 total) using the 6 supplied Boss twin bolt mounting brackets. Each bracket has three tent mounting holes; however, a minimum of two bolts per bracket must be fitted through the tent rail. Each bracket must also be secured to vehicle mounting rails or canopy using 1 × M10 hex-head bolt and large washers per bracket. Note: The 304 stainless M10 bolts are not supplied due to the unknown length required.
6. Warranty note: The Boss warranty applies when the tent is installed to Boss specifications using Boss-supplied brackets and hardware. We highly recommend using an approved fitter. DIY installation is permitted. Damage caused by incorrect fitment, substituted hardware, modifications, or any modification after delivery is not covered under the Boss warranty.

The above diagram is the Recommended Optimum mounting locations. Maximum overhangs stated must not be exceeded.

Centre mount must be within 100 mm (+ or -) of centre between the front and rear mount.

Note: Fitting the RT1 to a flat roof or roof rack is more optimal due to improved load distribution.